

**Seat Ventilation with Heated Seats , (Q1A),(Q1D),(Q4Q),(3L4),(3PN)**

From May 2010

**Audi**


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Memory Seat/Steering Column Adjustment Control Module,  
Driver Power Seat Adjustment Circuit Breaker 1

- J136 Memory Seat/Steering Column Adjustment Control Module  
S44 Driver Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station  
S133 Safety Fuse 3  
T12x 12-Pin Connector  
T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat  
T32m 32-Pin Connector

- 34 Ground Connection Under Driver Seat  
95 Ground Connection 1 (in Seat Adjustment Wiring Harness)  
371 Ground Connection 6 (in Main Wiring Harness)  
B316 Positive Connection 2 (30a) (in Main Wiring Harness)  
M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)  
\* Refer to Applicable Wiring Diagram for Fuse Positions  
\*2 Depending on Equipment

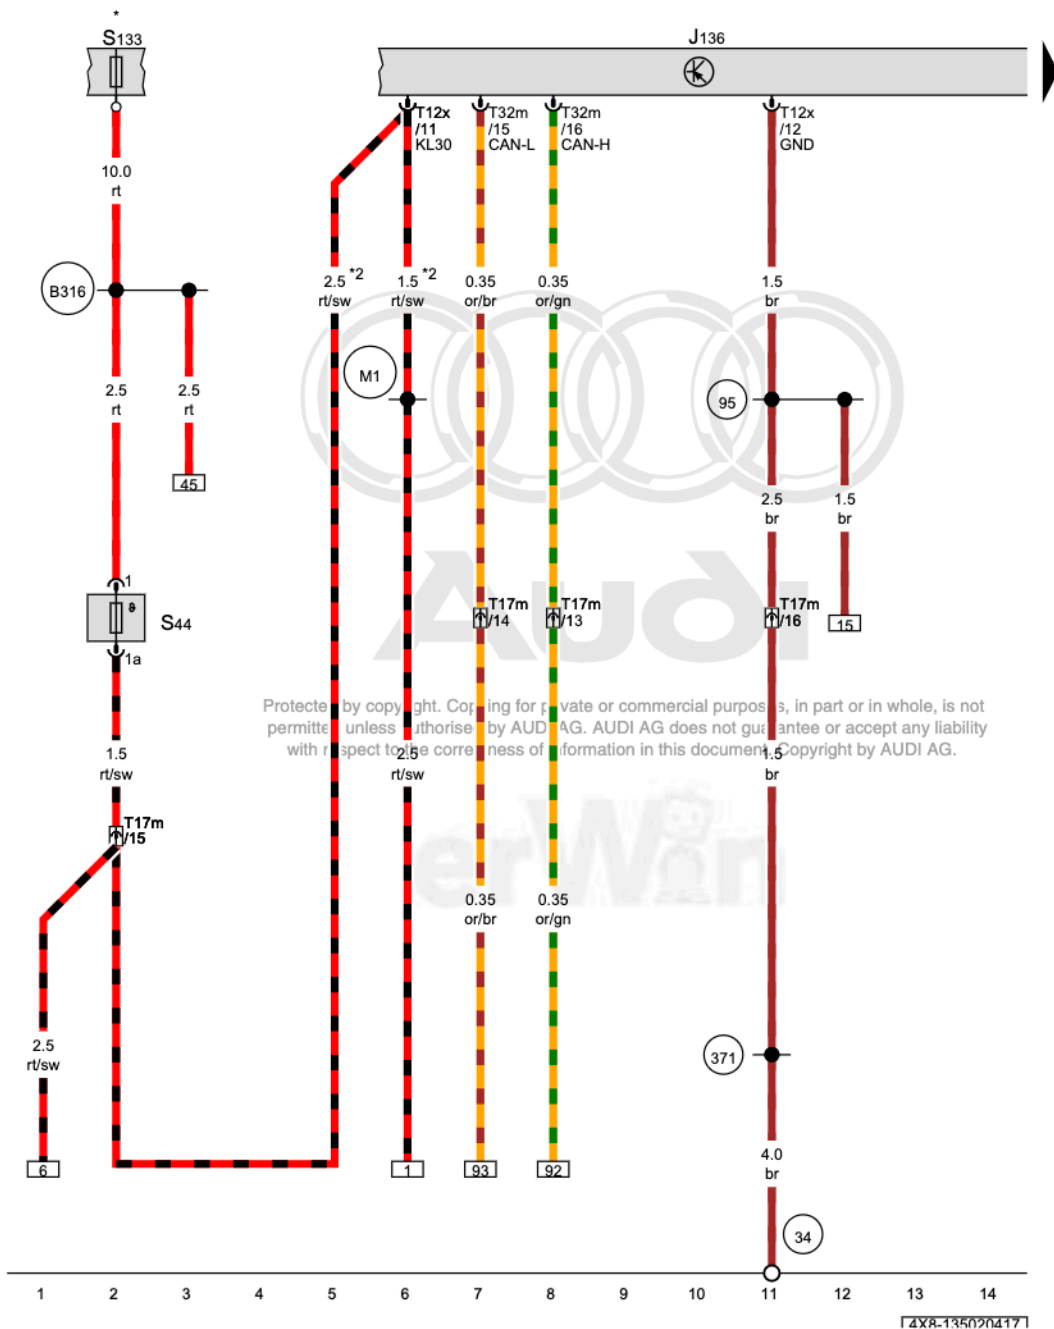

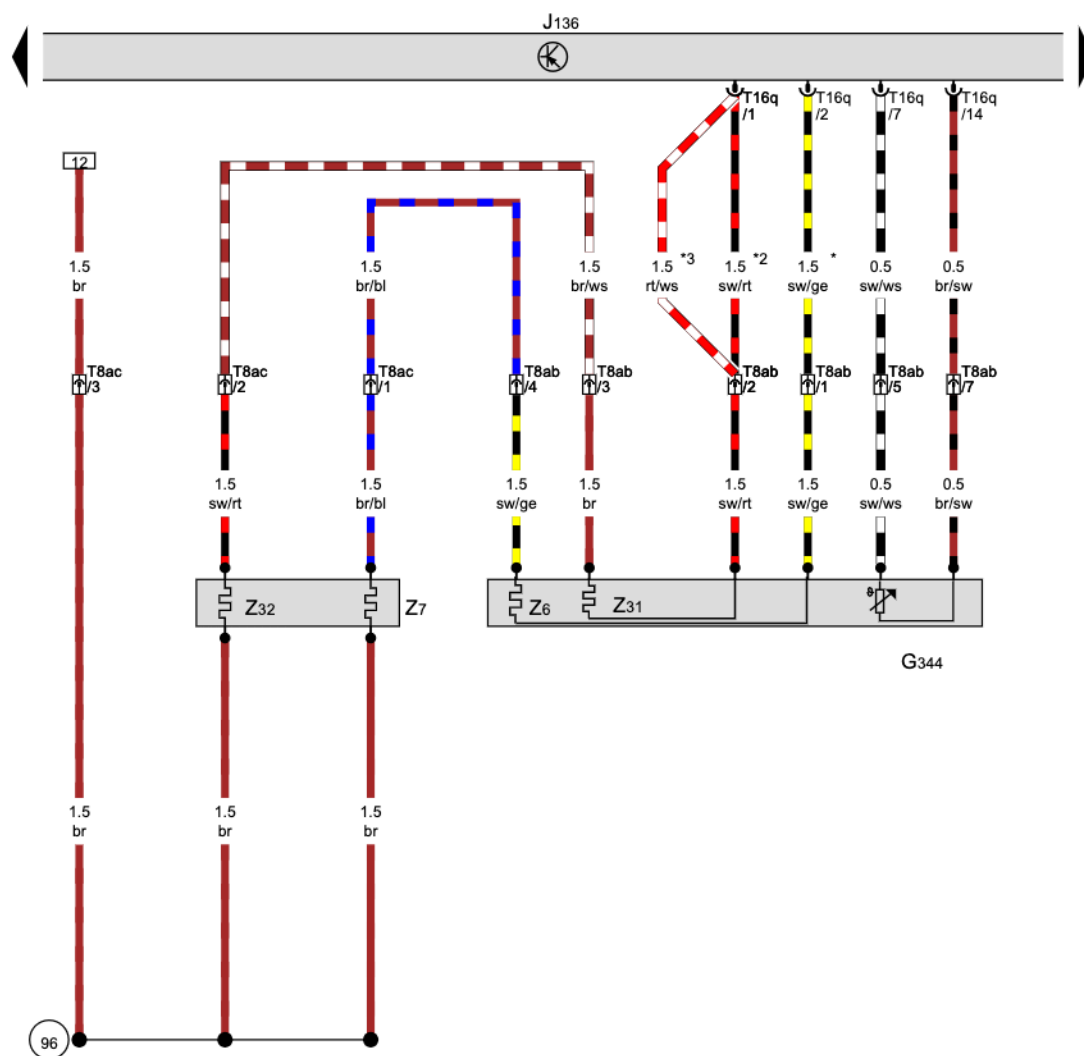


Left Front Seat Temperature Sensor, Memory Seat/  
Steering Column Adjustment Control Module, Driver Seat  
Heating Element, Driver Backrest Heating Element

- G344 Left Front Seat Temperature Sensor
- J136 Memory Seat/Steering Column Adjustment Control Module
- T8ab 8-Pin Connector, In the Driver Seat
- T8ac 8-Pin Connector, In the Driver Seat
- T16q 16-Pin Connector
- Z6 Driver Seat Heating Element
- Z7 Driver Backrest Heating Element
- Z31 Driver Seat Bolster Heater
- Z32 Driver Seat Backrest Bolster Heater
- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- \* Depending on Equipment
- \*2 Through June 2010
- \*3 From June 2010

ws = white  
sw = black  
ro = red  
rt = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
vi = lilac  
ge = yellow  
or = orange  
rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

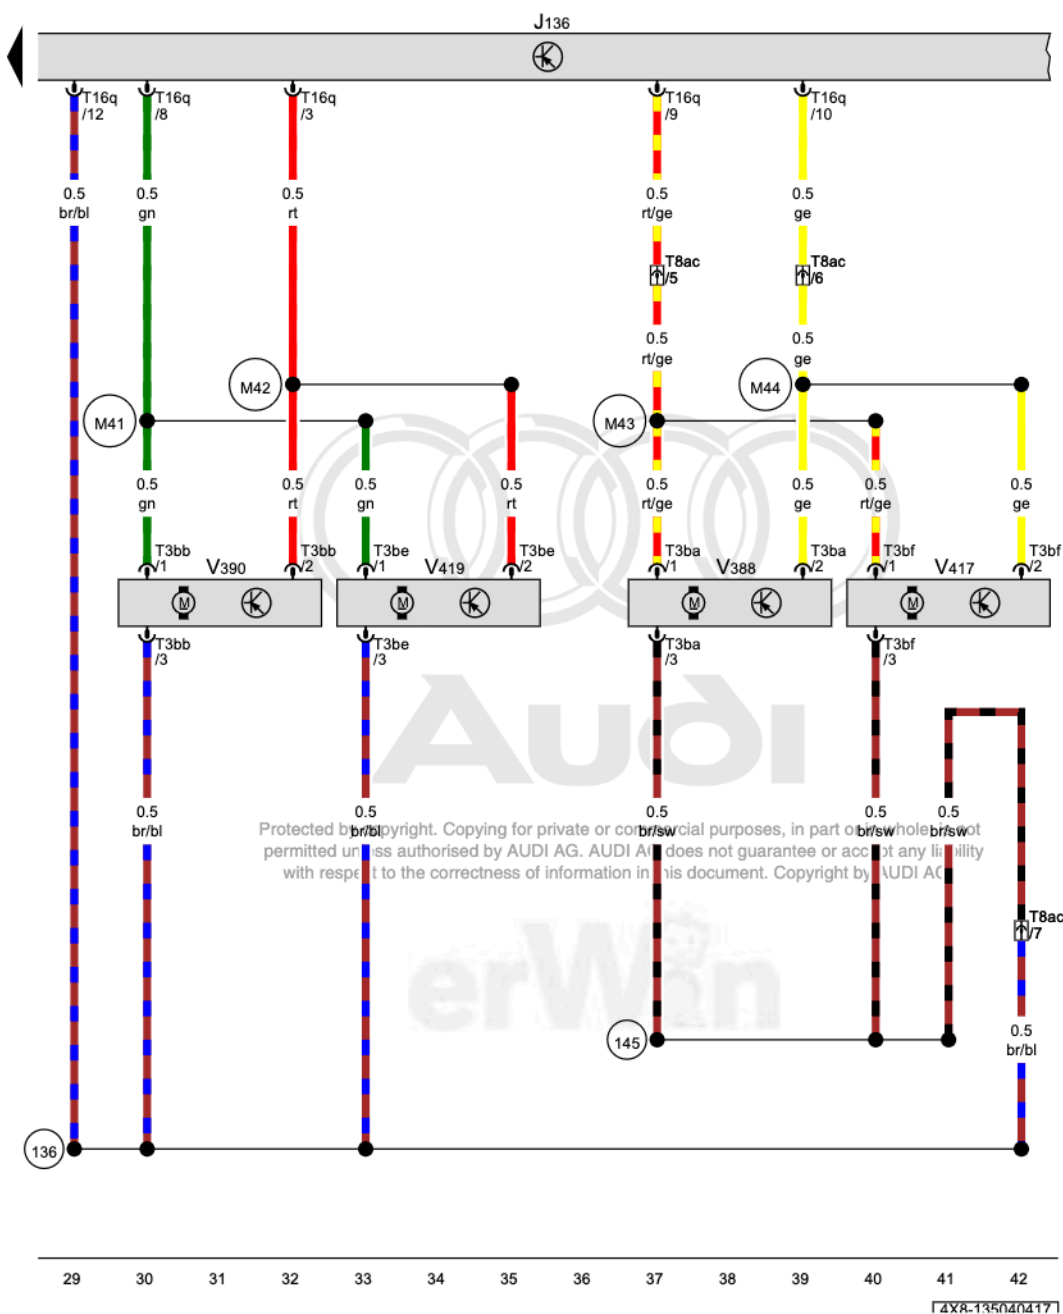

# Memory Seat/Steering Column Adjustment Control Module, Driver Seat Backrest Blower Fan, Driver Seat Cushion Blower Fan


- J136 Memory Seat/Steering Column Adjustment Control Module
- T3ba 3-Pin Connector
- T3bb 3-Pin Connector
- T3be 3-Pin Connector
- T3bf 3-Pin Connector
- T8ac 8-Pin Connector, In the Driver Seat
- T16q 16-Pin Connector
- V388 Driver Seat Backrest Blower Fan
- V390 Driver Seat Cushion Blower Fan
- V417 Driver Seat Backrest Blower Fan 2
- V419 Driver Seat Cushion Blower Fan 2
- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- 145 Ground Connection 3 (in Heated Seats Wiring Harness)
- M41 Connection 1 (in Driver Seat Wiring Harness)
- M42 Connection 2 (in Driver Seat Wiring Harness)
- M43 Connection 3 (in Driver Seat Wiring Harness)
- M44 Connection 4 (in Driver Seat Wiring Harness)

# Front Passenger Memory Seat Control Module, Front Passenger Power Seat Adjustment Circuit Breaker 1

- J521 Front Passenger Memory Seat Control Module
- S46 Front Passenger Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
- S131 Safety Fuse 1
- T12aa 12-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T32n 32-Pin Connector

- 35 Ground Connection Under Front Passenger Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 378 Ground Connection 13 (in Main Wiring Harness)
- B298 Positive Connection 2 (30) (in Main Wiring Harness)
- M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)


- \* Refer to Applicable Wiring Diagram for Fuse Positions
- \*2 Depending on Equipment
- \*3 From June 2014

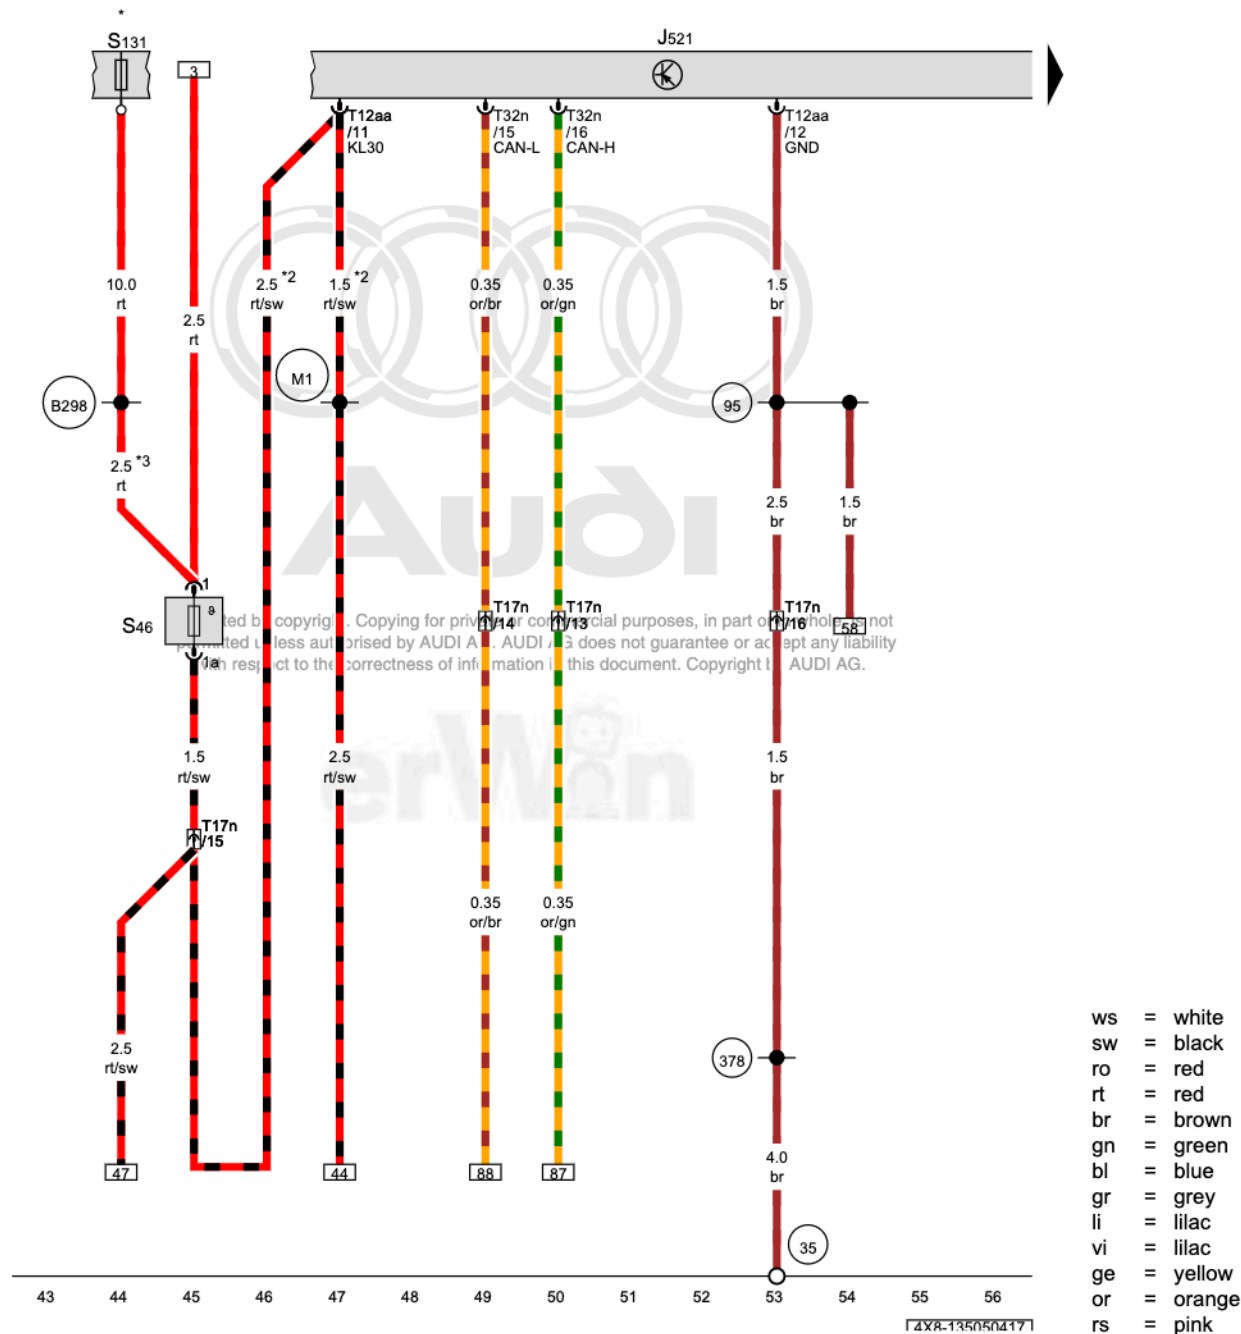



G345	Right Front Seat Temperature Sensor
J521	Front Passenger Memory Seat Control Module
T8ah	8-Pin Connector, In the Front Passenger Seat
T8ai	8-Pin Connector, In the Front Passenger Seat
T16r	16-Pin Connector
Z8	Front Passenger Seat Heating Element
Z9	Front Passenger Backrest Heating Element
Z33	Front Passenger Seat Bolster Heater
Z34	Front Passenger Seat Backrest Bolster Heater
96	Ground Connection 1 (in Heated Seats Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

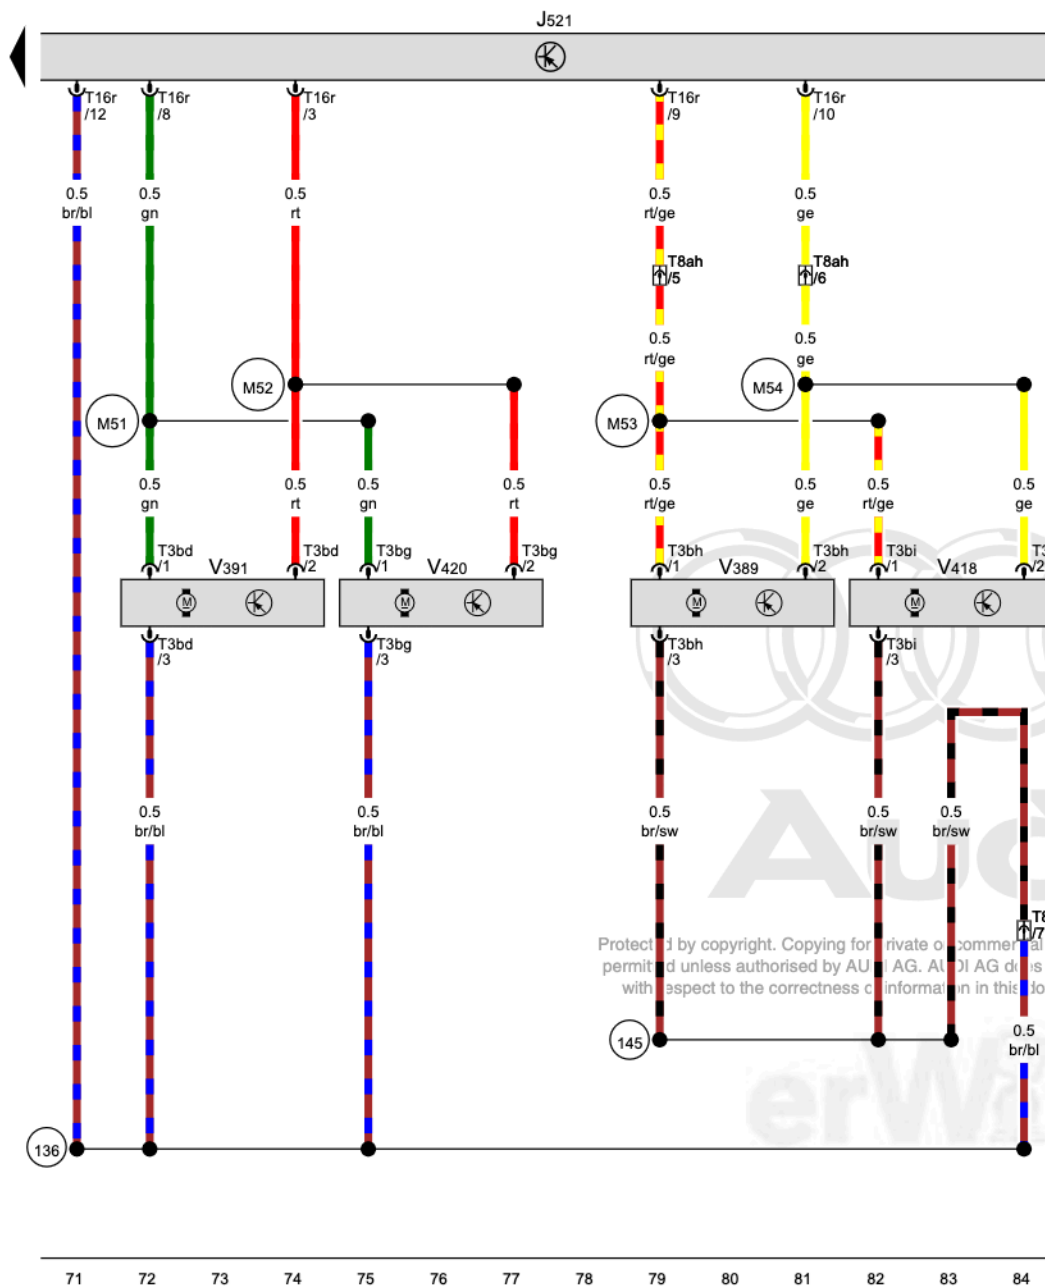

# Front Passenger Memory Seat Control Module, Front Passenger Seat Backrest Blower Fan, Front Passenger Seat Cushion Blower Fan

- J521 Front Passenger Memory Seat Control Module
- T3bd 3-Pin Connector
- T3bg 3-Pin Connector
- T3bh 3-Pin Connector
- T3bi 3-Pin Connector
- T8ah 8-Pin Connector, In the Front Passenger Seat
- T16r 16-Pin Connector
- V389 Front Passenger Seat Backrest Blower Fan
- V391 Front Passenger Seat Cushion Blower Fan
- V418 Front Passenger Seat Backrest Blower Fan 2
- V420 Front Passenger Seat Cushion Blower Fan 2

- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- 145 Ground Connection 3 (in Heated Seats Wiring Harness)
- M51 Connection 1 (in Front Passenger Seat Wiring Harness)
- M52 Connection 2 (in Front Passenger Seat Wiring Harness)
- M53 Connection 3 (in Front Passenger Seat Wiring Harness)
- M54 Connection 4 (in Front Passenger Seat Wiring Harness)


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white  
sw = black  
ro = red  
rt = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
vi = lilac  
ge = yellow  
or = orange  
rs = pink

[ZX8-135070417]

Data Bus on Board Diagnostic Interface, Comfort System  
CAN Bus Low Wire Junction

- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- (B397) Comfort System CAN Bus High Connection 1 (in Main Wiring Harness)
- (B406) Comfort System CAN Bus Low Connection 1 (in Main Wiring Harness)

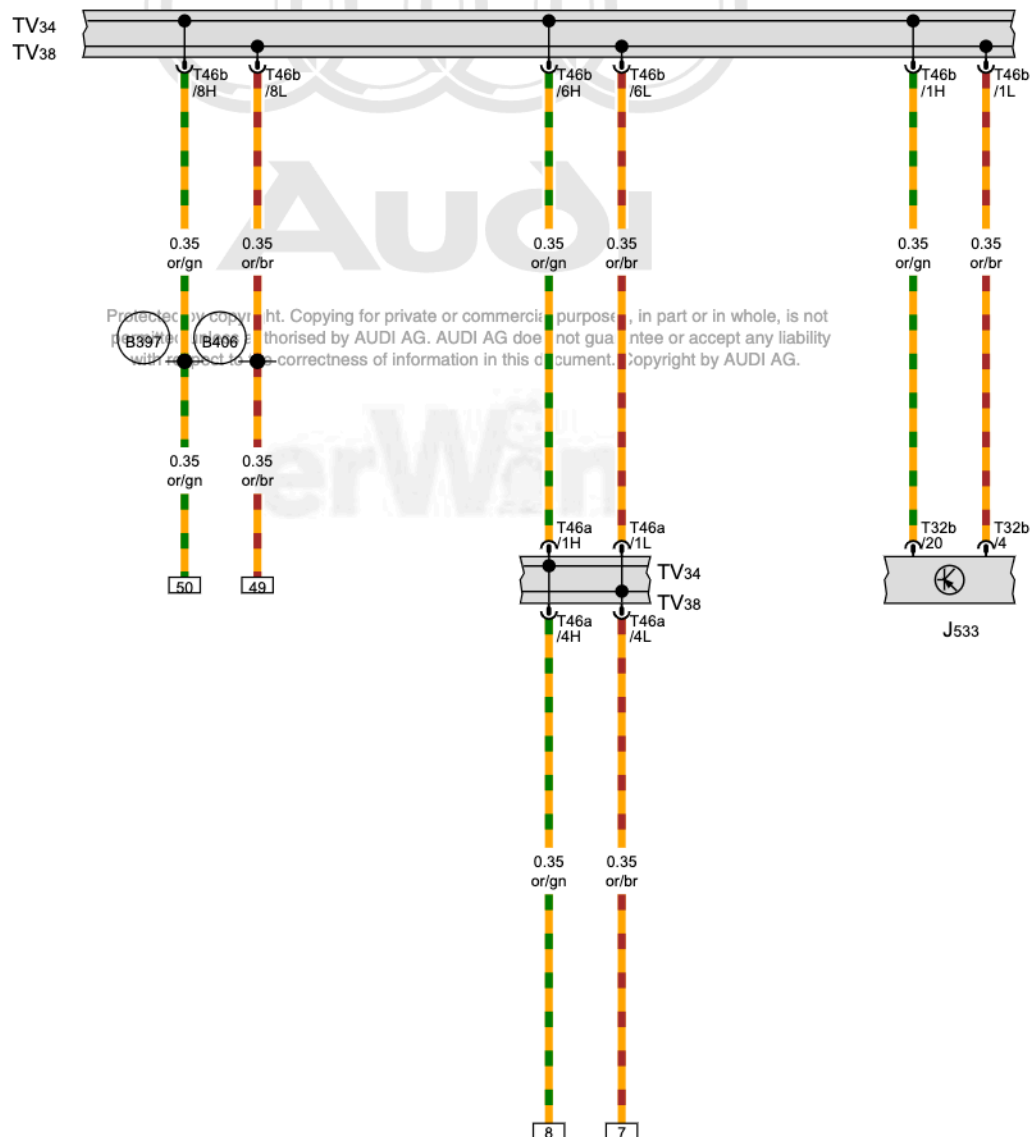

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink